MITEL

5324 IP Phone



The Mitel 5324 IP Phone

- Display
- Softkeys
- Ring/Message Indicator
- Volume, Speaker, Mute Controls
- Fixed-Function Keys
- Key Pad
- Personal Keys
- Speaker
- Handset

Fixed-Function Keys



SPEAKER



MUTE



MENU



CANCEL



REDIAL



△∞ HOLD



TRANSFER/CONFERENCE



MESSAGE



NOTE: For more information about using other features, or about programming Personal Keys on your 5324 IP Phone, refer to the 5312/5324 IP Phone User Guide located at www.mitel.com, or contact your Administrator.

Make a Call

- Diff the handset, or
- 4 Press (1)
- 6 Dial the number, or
- Press a Speed Call key, or
- 5 Press 123.★ , or
- Oial the prefix for external calls (e.g. 9) and the number

Answer a Call

- Lift the handset, or
- 4 Press (1) , and begin speaking.

End a Call

- 5 Press (X), or
- Replace the handset.

Place a Call on Hold

- 5 Press △ The line key flashes.
- Replace the handset if necessary.

Retrieve a Call from Hold

- Lift the handset, or
- 4 Press (1)
- Press the flashing line key.

Retrieve a Message

5 Press It flashes when a message is Follow the voice mail prompts to retrieve your message.

Transfer a Call

- S Press ~ S

 S

 S

 S

 S

 .
- 6 Dial the number. Wait for an answer.
- Hang up, or announce the transfer and then

Conference a Call

- 5 Press ASO.
- 6 Dial the number. Wait for an answer.
- S Press ~ S™.

Program a Speed Call

- 6 Press P.
- Press No until Personal Keys? appears.
- Press Yes.
- Press a Personal Key.
- Press Change.
- 2 Press Yes for Speed Call?
- 6 Dial the number.
- Press Priv to make the number private.
- Press Save.
- 6 Press

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 4 Press repeatedly to raise the volume, or repeatedly to lower the volume.
- 4 Press 💆 to mute the microphone. See the 5312/5324 IP Phone User Guide for details.